




Unscrew and Remove Battery

Written By: Sandy Qualey-Dobson



Step 1 — Unscrew the Battery

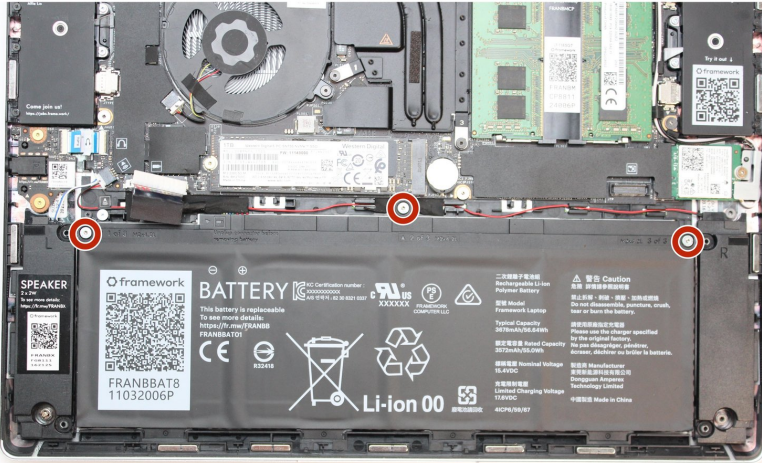

- Using the T5 bit in the Framework Screwdriver, unscrew the three fasteners on the battery.
- ⓘ Note: The screws will come loose after a few revolutions however they will remain attached to the battery.

Step 2 — Remove the battery from the Mainboard



- Use your finger tips to gently lift the battery up and away from the bottom cover. Carefully lift it out and keep it in a safe place.

⚠ Warning: Handle the battery by the plastic frame, make sure not to bend, scratch, cut, or puncture it, and keep it away from heat sources

