



Mint 21 Installation on the Framework Laptop

How to install Linux Mint 21 on a Framework Laptop

Written By: Nirav Patel



INTRODUCTION


Once you have your Framework Laptop set up following the [Quick Start Guide](#), you're ready to install your preferred OS. With the latest release of Linux Mint, everything works pretty smoothly. You can check our [Linux page](#) for additional Linux compatibility notes.



PARTS:

- [USB Flash Drive](#) (1)
-

Step 1 — Preparing Mint Installation Media

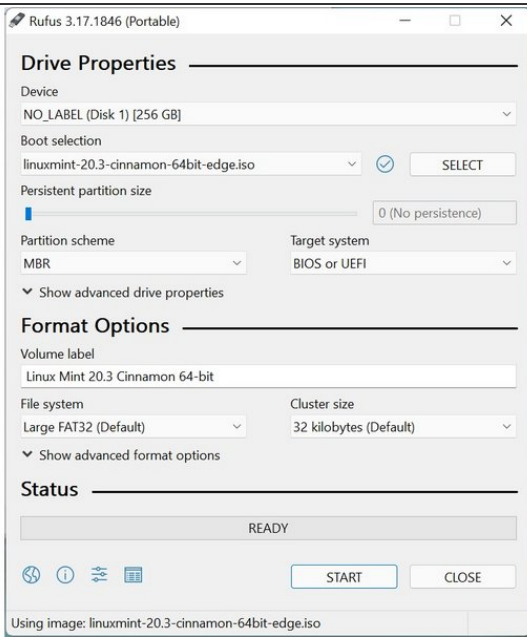

- First, download [Mint 21](#) from Mint's website. Mint has a [detailed installation guide](#) that you can follow. We'll go through the steps in this Guide assuming you have a simple installation scenario of a fresh install on a blank drive.
- Download [Rufus](#) as a tool to create the USB installer from the ISO. Rufus is available for Windows. For installation instructions coming from other OS's, refer to Mint's documentation. You can either install it or download the portable version that runs directly from the executable.
- Launch Rufus. Insert your USB drive (8GB or larger). Click on "Select" and select the .iso that you downloaded. Make sure the USB drive you want is selected in the Device dropdown. Click "Start", accept any prompts that come up, and wait a minute or two for it to complete.
- Once the USB drive creation is complete, you can close Rufus and eject the USB drive from your OS.

Step 2 — Running Mint



- Insert the USB drive into your powered off Framework Laptop, and then power on. If you have an existing OS installed on the Storage drive in your laptop, you'll need to tap F12 as you boot to bring up the Boot Manager screen. You can then select the "Linpus lite" item with your arrow keys and hit Enter.
- ❗ If you don't have an internal storage drive installed or it is blank, the laptop will boot to the USB drive directly.
- Hit Enter again to boot into Mint.
- After a few seconds, you're in! If you just want to try Mint out, you can use the live USB version of it without touching the internal storage drive. If you do want to install Mint to the internal storage drive, go on to the next step.

Step 3 — Installing Mint to a drive



- Click on the Install Linux Mint icon on the desktop.
- Select the language and keyboard language you'd like to use. On the Multimedia codecs screen, optionally check the "Install multimedia codecs" box and set a Secure Boot password, and click Continue.
 - ❗ If you do select Secure Boot, on the first boot after installation, a blue screen will come up, and you can select Continue.
- On the "Installation type" screen, you may have a range of options available if there is already an OS on your internal drive. For the purposes of this guide, we're assuming a clean install with the "Erase disk and install Linux Mint" option. For the other advanced options around dual booting, check [Mint's documentation](#). Click "Install Now".
- Follow the on-screen instructions to select your time zone and set up your user account. After installation completes, click Restart Now.

Step 4 — Completing Setup



- ✦ Make sure to update to the latest packages regularly, as there are often key fixes. In Terminal, you can run "sudo apt update && sudo apt upgrade -y". You can also update using the Update Manager application.
- ⓘ Note that while the fingerprint reader is supported, Mint XFCE does not currently ship with a GUI for enrolling fingerprints.
 - You enroll and enable it on the command line by running "sudo apt-get install fprintd libpam-fprintd", then "fprintd-enroll -f left-index-finger" and touching the fingerprint reader repeatedly. Then run "sudo pam-auth-update" and toggle the "Fingerprint authentication" option by pressing spacebar.
- ⚠ After installing your OS, we recommend updating to the latest firmware ([11th Gen Intel Core](#) or [12th Gen Intel Core](#)) to make sure the laptop is running at optimal performance and stability.

Step 5 — Additional steps for Framework Laptop (12th Gen Intel Core)



- The ALS and the brightness up/down keys conflict on currently shipping kernels. You can disable the ALS to restore brightness up/down functionality. First, edit `/etc/default/grub` as root.
- Find the line that starts with `GRUB_CMDLINE_LINUX_DEFAULT`, and modify it to:
`GRUB_CMDLINE_LINUX_DEFAULT="quiet splash module_blacklist=hid_sensor_hub"`
- Save and close the file. Then in Terminal, run `"sudo update-grub"` and then reboot.

Enjoy using Mint on your Framework Laptop! If you have any questions or run into any issues, we recommend bringing them to the Community in the [Mint topic](#). Members of the Framework team participate in discussions there.