




AMD Ryzen 7040 Series Upgrade Overview

Written By: Sandy Qualey-Dobson

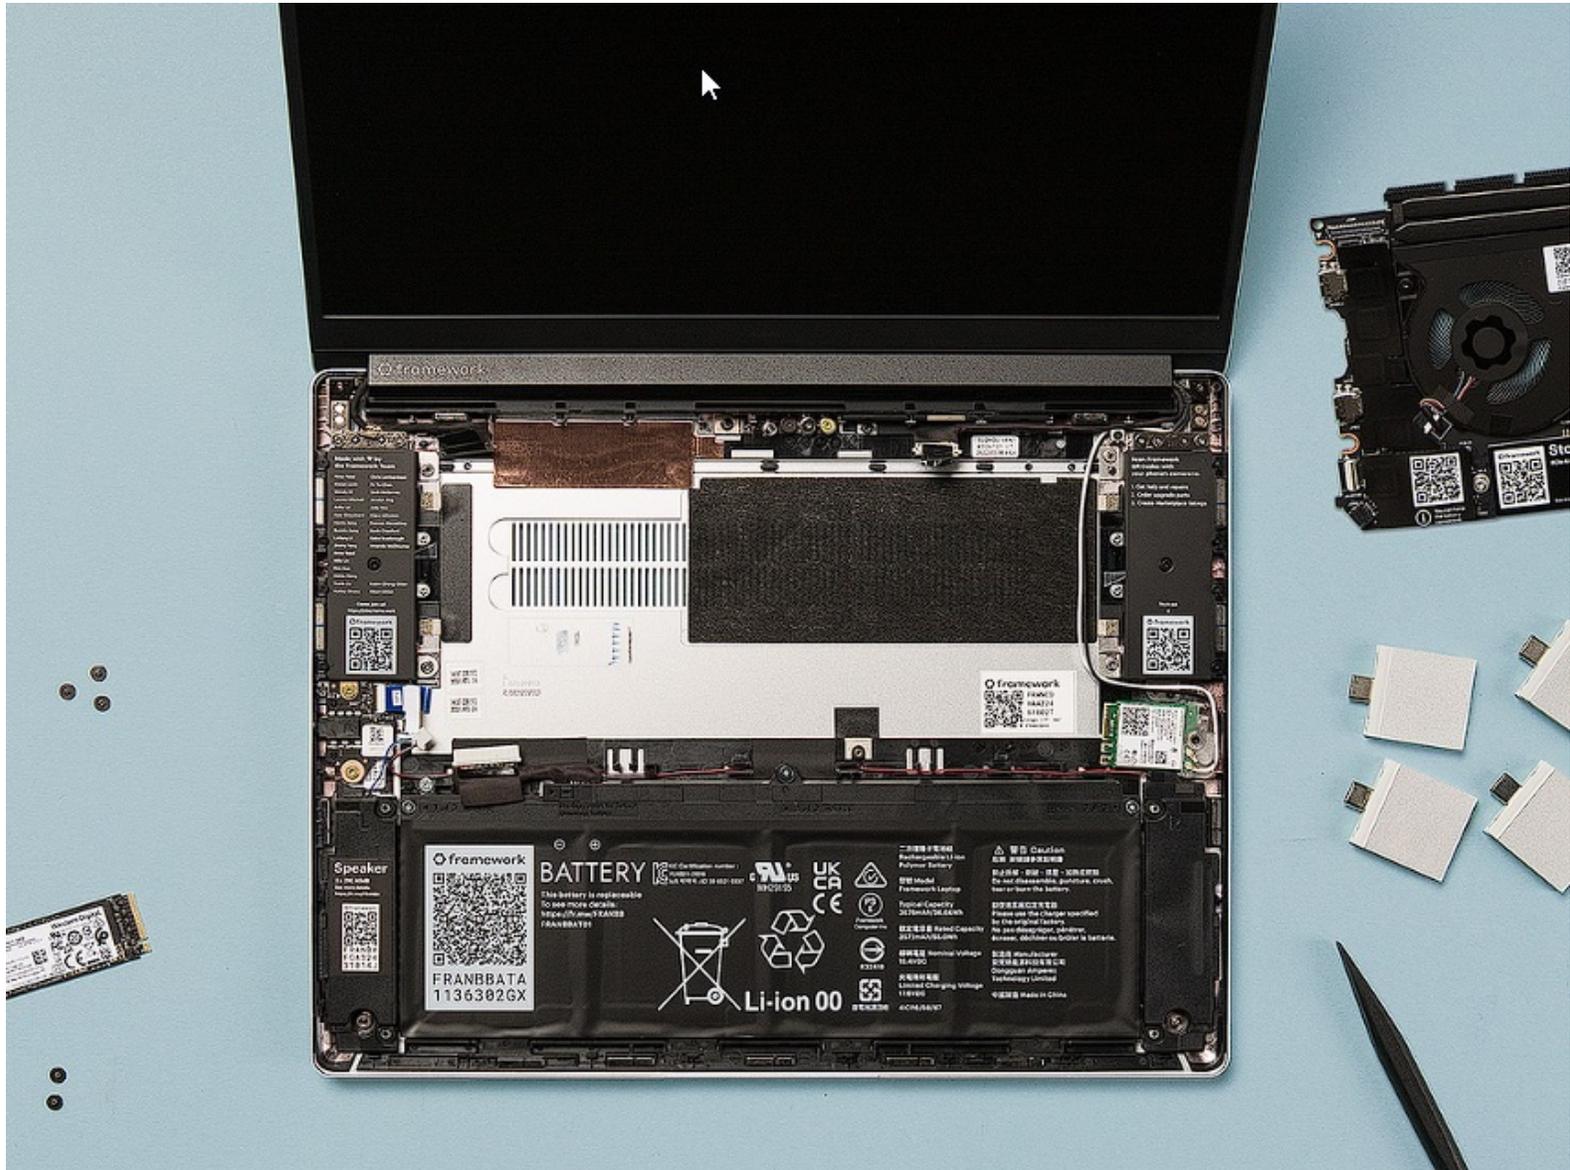

INTRODUCTION

Before you get started, if you are running Windows, there are a few steps you'll need to take:

- If you're upgrading from an 11th Gen Intel Core system running Windows 10 to an AMD Ryzen 7040 series system, we recommend [upgrading to Windows 11](#) before swapping the Mainboard.
- Make sure you back up your data.
- If you're running a Pro version of Windows, suspend BitLocker by following our directions [here](#).
- If you're running a Home version of Windows and have enabled Windows Device Encryption, you will want to disable it. To disable it, press Win + I to open Settings and select Privacy & Security. Then, click on Device Encryption on the right panel and toggle the setting to Off.
- Find your product key or link your Windows license to a Microsoft account to make sure you can re-activate Windows after the change.

This guide combines many of the possible upgrades introduced with AMD Ryzen 7040 Series so if you are skipping one or more of the upgrades please see which steps to skip below (if you are simply carrying out one of these upgrades we recommend the dedicated guide for that component).

- The guide assumes you are upgrading your Mainboard but if you are not, you can skip steps 8-9, and steps 13-18.
- If you are not upgrading your Battery you can skip step 7 and steps 19-24.
- If you are not upgrading your Hinges you can skip steps 27-30
- If you are not upgrading your Display but are upgrading Hinges, there are no steps to skip (as you will need to remove the Display in order to upgrade Hinges)
- If you are not upgrading both Display and Hinges you can skip steps 25-34



TOOLS:

- [Framework Screwdriver](#) (1)



PARTS:


- [Mainboards](#) (1)
- [Hinge Kit](#) (1)
- [Display Kit](#) (1)
- [Battery](#) (1)
- [Compatible WiFi Card](#) (1)

Step 1 — Install Driver Bundle



- If you are on Windows, before swapping your Mainboard to the AMD version, you'll need to pre-install the RZ616 WiFi drivers by downloading and running the latest [Framework Driver Bundle for AMD Ryzen™ 7040 Series](#). Note that you'll need to run the same Driver Bundle installer again after swapping in the AMD powered Mainboard and RZ616 card.
- ⓘ You should run the Driver Bundle linked above for AMD Ryzen™ 7040 Series even if the Mainboard you are replacing is an Intel® Core™ Mainboard.

Step 2 — Shut down the Framework Laptop

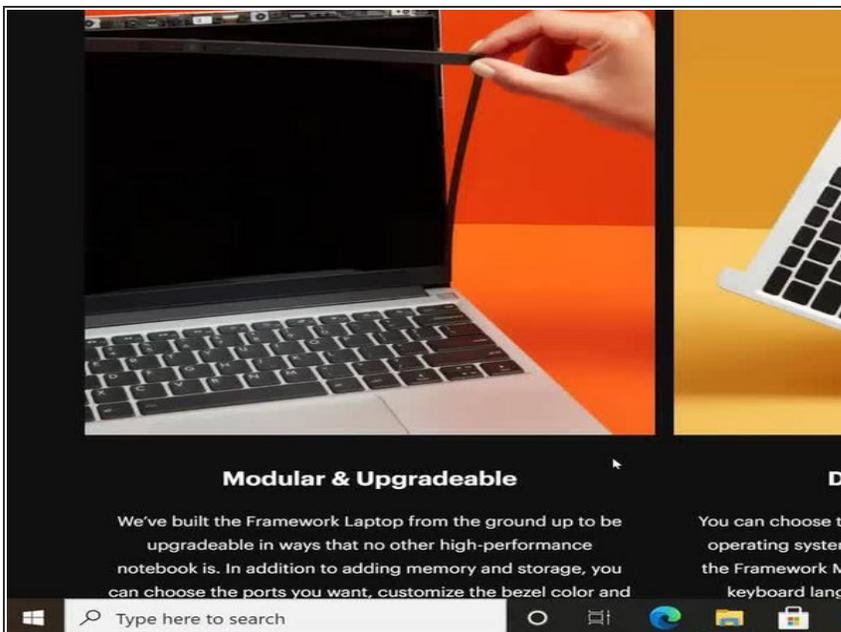


- Power off the Framework Laptop by navigating to the Windows icon on the bottom left and clicking on "Power" followed by "Shut down," or if on Linux, the equivalent action there.

Step 3 — Unplug power




- Unplug your power cable from the USB-C Expansion Card in your Framework Laptop.

Step 4 — Remove all the Expansion Cards

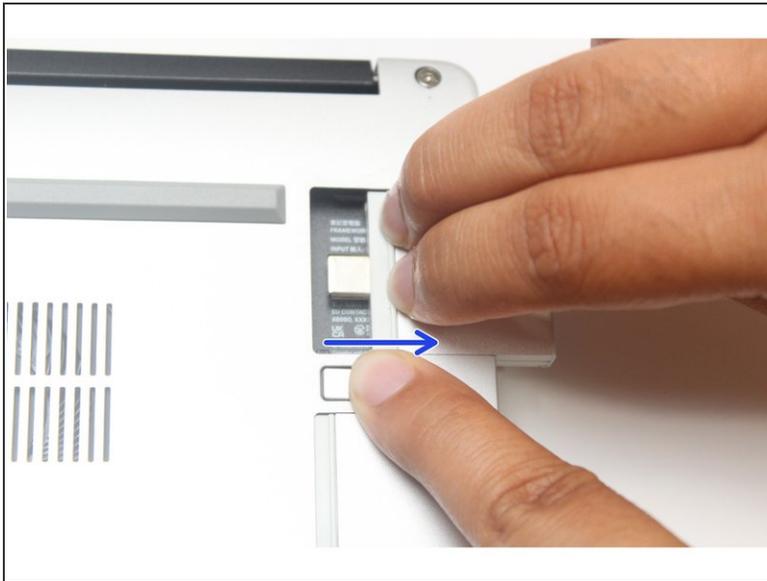

- Close your laptop completely and turn it over so you can access the Expansion Cards.
 - While keeping the release button pressed, use your other fingers to slide the Expansion Card away from the laptop.
- ⚠ Important: You may have to use a little bit of force to fully disconnect the Expansion Card.**
- Make sure each Expansion Card is fully removed before proceeding to the next step.

Step 5 — Unscrew the five fasteners on the Bottom Cover

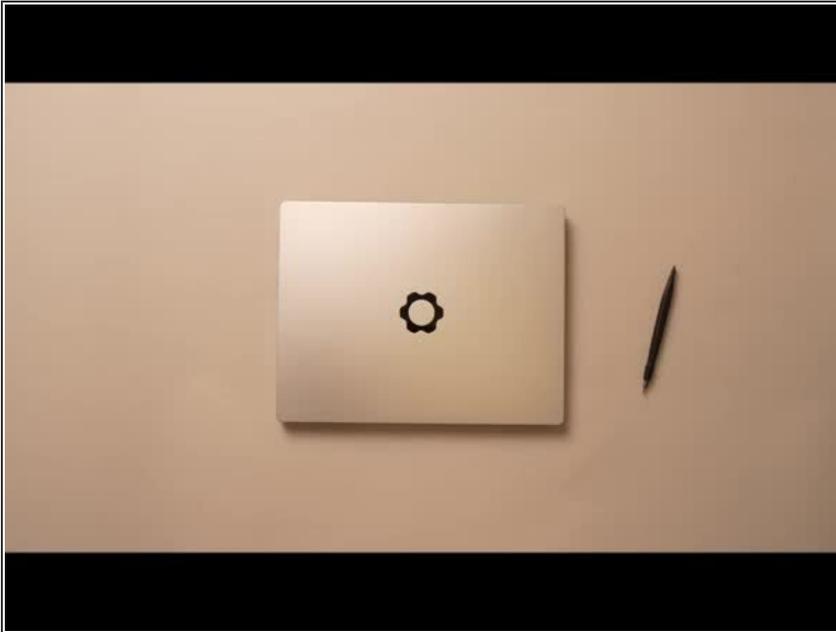

- Close the lid on your Framework Laptop and place it upside down on a soft, non-marring surface, such as the bag that it shipped in.
- Using the T5 bit in the Framework Screwdriver, unscrew the 5 fasteners on the Bottom Cover. These fasteners will remain attached in the Bottom Cover so that you do not lose them.
- The fastener on the bottom left (circled in red) will not unscrew as far as the others, as it is acting as a lifter for the Input Cover.

⚠ You'll hear this fastener start clicking as you rotate when it is unscrewed far enough.

⚠ Do not use a powered tool for these steps, as this will likely result in damage to the fasteners.

Step 6 — Lift up and flip over the Input Cover



- Flip the Framework Laptop back over and open the lid to around 120 degrees.

⚠ Important: Pull the Input Cover off carefully as it is still attached to the Mainboard via the Touchpad Cable. You don't need to disconnect this cable to do most repairs. You can just flip the Input Cover over. If you do want to disconnect it though, make sure to disconnect the Mainboard side using the finger loop over the orange label.

- The bottom right corner of the Input Cover lifts up when the five fasteners are properly unscrewed from the previous step. You should not have to use any excessive force to remove the Input Cover.
- Carefully lift the cover up from the bottom right corner. If you need to, you can use the spudger end of the Framework Screwdriver to lift it as well. Lift the Input Cover off the Mainboard, flip it over (keyboard side down), and place it about halfway on the Bottom Cover.


⚠ Be sure not to put too much force on the Touchpad Cable when doing this.

 If the LEDs on the left and right sides of the system are flashing red when you lift off the cover, it means the system is still powered on. Make sure your power cable isn't plugged in and that you have shut down correctly.

 Note that it may take up to 30 seconds after shutting down for the system to fully power off. Wait until the LEDs stop flashing before proceeding.


 **You should keep the Battery connector plugged in unless you need to replace the Battery, Mainboard, or Speakers. This connector is easy to accidentally damage, so it's better to not handle it.**

Step 7 — Disconnect the Touchpad Cable

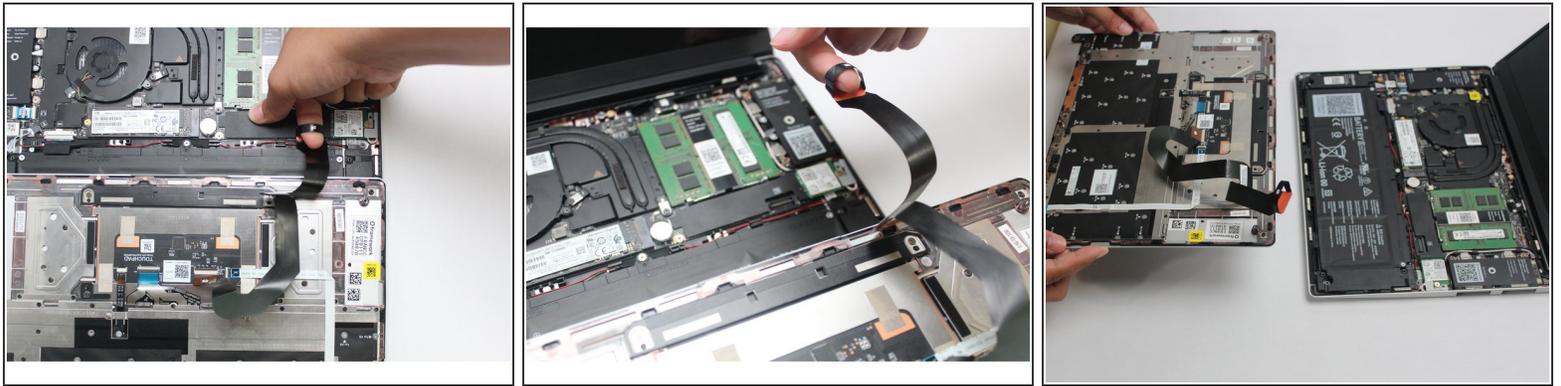

- Disconnect the Touchpad Cable from the Mainboard by inserting your finger into the loop and pull directly upward using a slight amount of force.
- ⓘ Avoid disconnecting the Touchpad side of the cable unless you need to replace the Touchpad Cable itself, since that connector is more fragile.
- Once the Touchpad Cable is disconnected, remove the Input Cover away from the Mainboard.
- The Input Cover is now fully disconnected from the Bottom Cover and can be set aside.


Step 8 — Unplug the Framework Laptop Battery

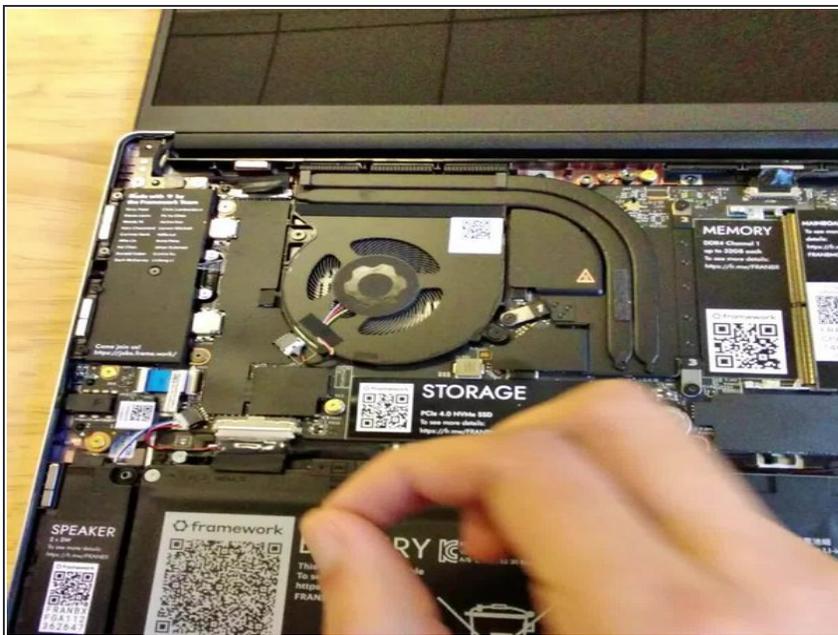

⚠ Be **extremely** careful when sliding the Battery connector out, as it is very easy to accidentally bend the pins. Make sure to slide straight down, and avoid letting the connector twist or bend.


- Gently disconnect the Battery by gripping the connector edges with both fingers and slide the connector straight down from the socket.

Step 9 — Disconnect the Speaker from the Mainboard

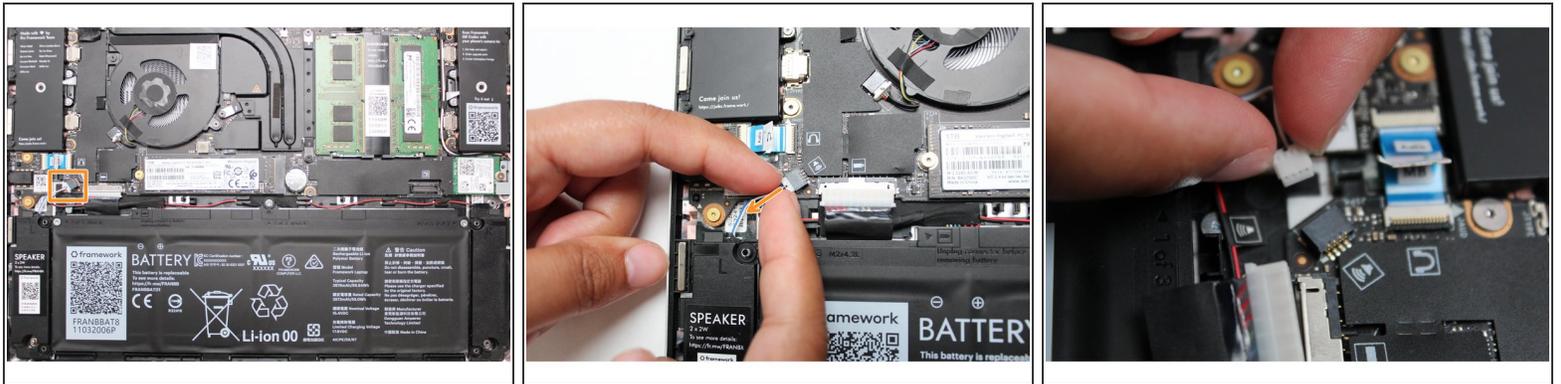


- Using both fingers and a slight amount of force, disconnect the Speaker cable from the Mainboard by pulling it straight out.

Step 10 — Disconnect the Audio Board Cable from the Mainboard

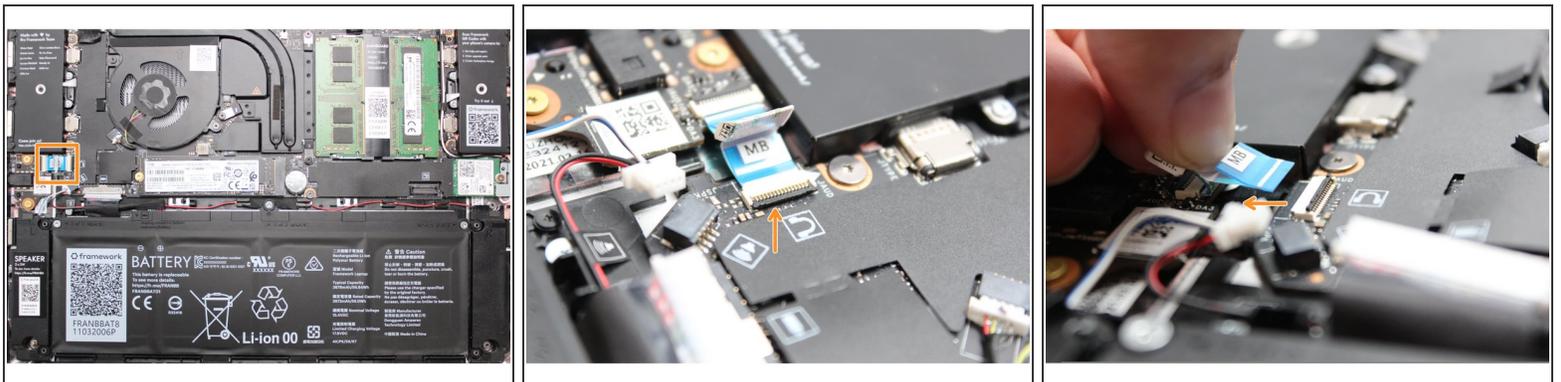


- Disconnect the Audio Flex Cable from the Mainboard. Using your fingernail or the spudger end of the Framework Screwdriver flip up the black latch on the connector and then gently slide the cable out of the connector.
- ⓘ There should be no resistance when disconnecting this cable.

Step 11 — Disconnect the Display from the Mainboard

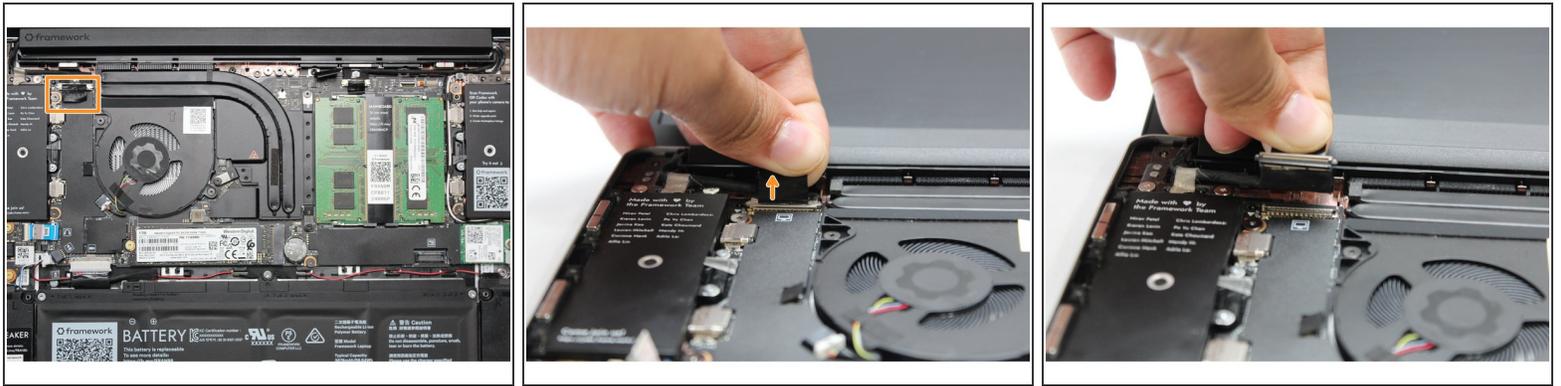

- Using your fingers, carefully disconnect the Display cable on the top, left hand side by using the pull tab to pull it upward.

Step 12 — Disconnect the Webcam from the Mainboard

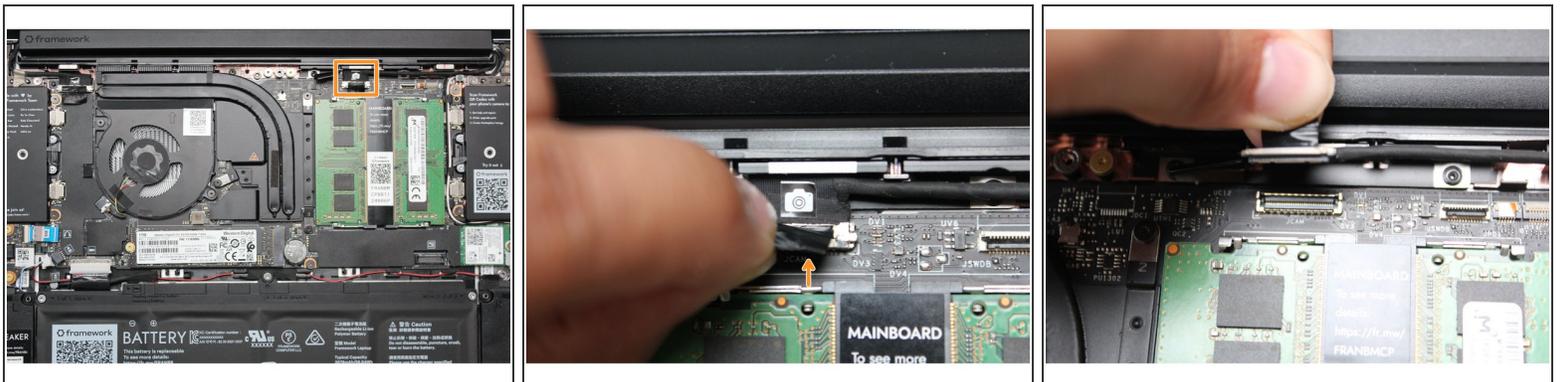

- Using your fingers, carefully disconnect the Webcam cable on the top, right hand side by using the black pull tab to pull it directly upward.

Step 13 — Remove the WiFi Module from the Mainboard



- Using the spudger end of the Framework Screwdriver, release the black and white WiFi Antenna cables by gently lifting them out from the rubber holders.
- Unscrew the fastener in the silver bracket holding down the WiFi module.
- Remove the WiFi bracket and gently pull the WiFi module out of the socket as indicated in the image.
- ⓘ You do not need to disconnect the black and white WiFi Antenna cables from the WiFi module. Keeping them connected will make it easier to insert the card back into place.

Step 14 — Remove the Memory from the Mainboard (Optional)




- ❗ If you are planning on reusing your currently Mainboard, you can skip this step and leave the DDR4 Memory installed as the new Mainboard uses DDR5 Memory.
- Using both fingers, gently pull the top and bottom metal release clips away from the Memory just enough for the module to pop up.
- ❗ The top and bottom clips should be released simultaneously for a single Memory module.
- The Memory module will pop up at a 20 degree angle. Carefully slide it out of the socket and remove it from the Mainboard.
- If you have more than one Memory module in place, repeat the steps for the other module.

Step 15 — Remove the Storage from the Mainboard





- Unscrew the fastener holding down the Storage.
- The Storage module will pop up at a 20 degree angle.
- Slide the module out of the socket using a straight motion and remove it from the Mainboard.

Step 16 — Remove the Mainboard fasteners

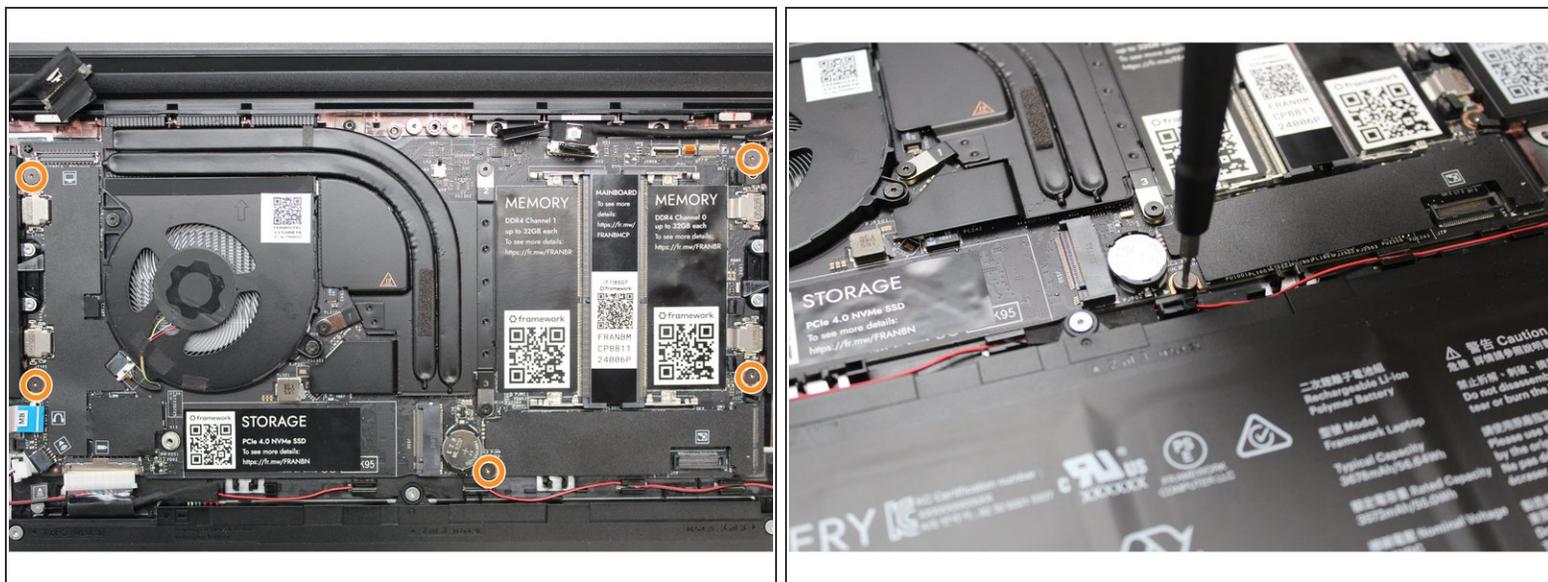

- Using the T5 bit in the Framework Screwdriver, unscrew the five fasteners holding down the Mainboard.
- ☑ These fasteners will completely come out. Be sure to keep them in a safe place during the replacement so that you do not lose them!

Step 17 — Remove the Mainboard

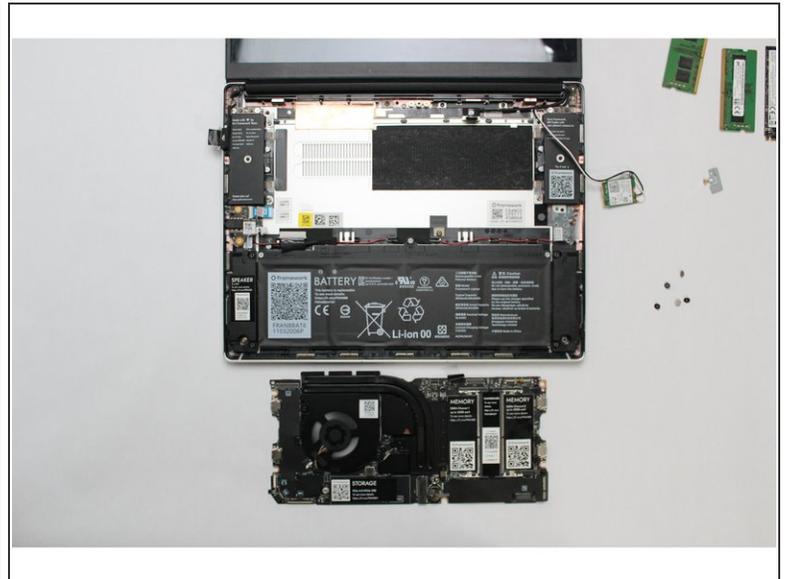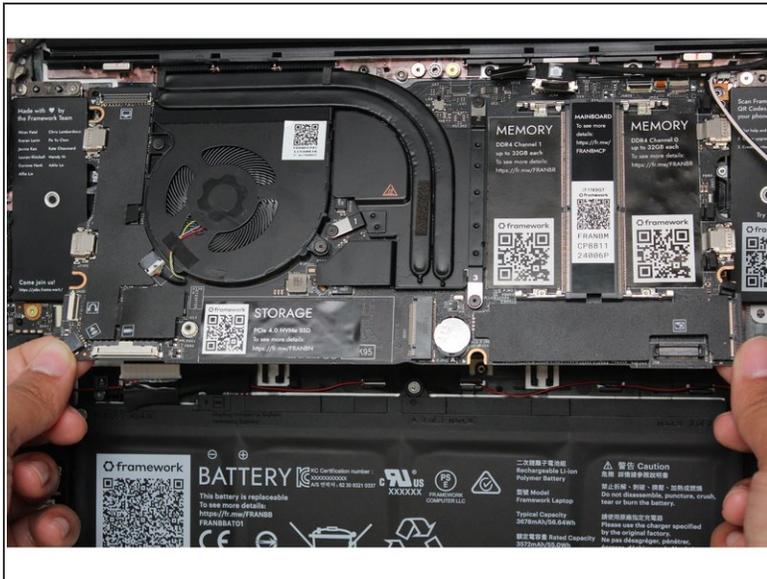


- In order to lift the Mainboard off the Bottom Cover, grab it from the bottom edges and lift up very gently. There should be no resistance when lifting up the Mainboard unless a previous step was missed.
- ⚠ The components located underneath the Mainboard are highly sensitive. Be sure to handle the board by the edges, and avoid touching any components on the board.
- The Mainboard is now fully disconnected from the Framework Laptop.

Step 18 — Install the new Mainboard into the Framework Laptop



- The easiest way to properly install the Mainboard is by aligning the two alignment pins on the Bottom Cover with the two holes on the Mainboard.
 - Take a close look at the actual Mainboard and you'll notice two small holes. You will see one hole on the top right and the other on the top left-hand side of the Mainboard as indicated in the first image with the orange arrows.
 - The alignment pins are located on the Bottom Cover as indicated with the green arrows in the second image.
 - Place the Mainboard on the Bottom Cover by using the alignment pins as a guide. Place the holes in the Mainboard directly over pins in the Bottom Cover. Both the left and right-hand side pins should fit into the holes perfectly.
- ⚠ The components located underneath the Mainboard are highly sensitive. Be sure to handle the board by the edges, and avoid touching any components on the board.**
- Once you have placed the Mainboard down be sure to make sure that the Speaker cable, Display cable, Camera cable, WiFi antenna cables, Audio Board cable, or the Battery cable are not stuck between the Mainboard and Bottom Cover as all the cables will need to be reconnected into their respective sockets after the Mainboard is secured in place.


Step 19 — Screw the Mainboard into place

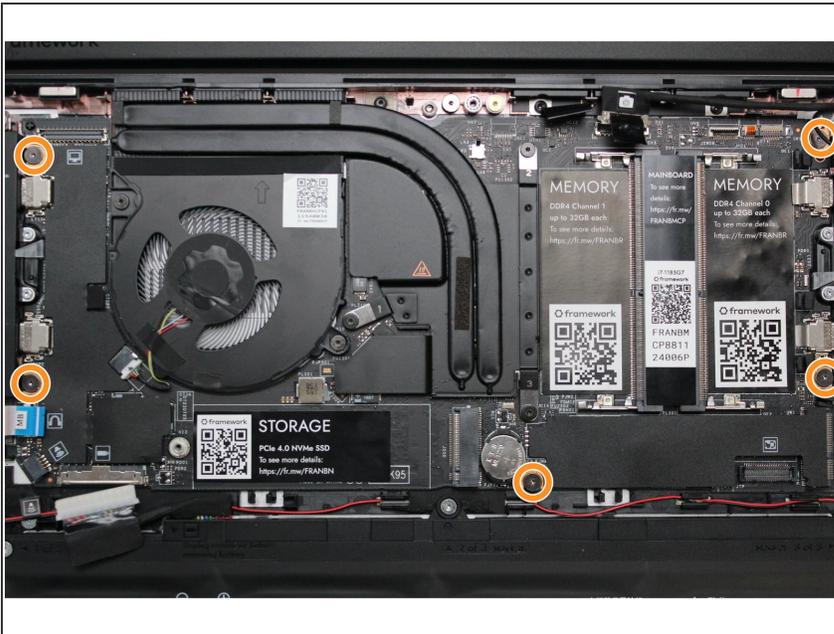

- Using the T5 bit in the Framework Screwdriver, screw the five fasteners into the Mainboard once it is properly seated.

⚠ Be sure to not over-tighten the fasteners.

Step 20 — Unscrew the Battery

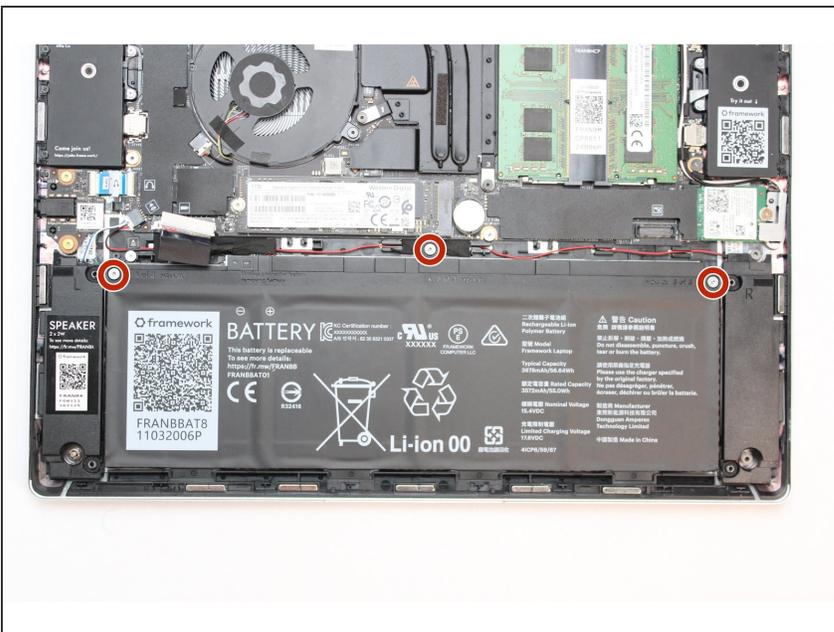

- Using the T5 bit in the Framework Screwdriver, unscrew the three fasteners on the battery.

ⓘ Note: The screws will come loose after a few revolutions however they will remain attached to the battery.


Step 21 — Remove the battery from the Mainboard



- Use your finger tips to gently lift the battery up and away from the bottom cover. Carefully lift it out and keep it in a safe place.

⚠ Warning: Handle the battery by the plastic frame, make sure not to bend, scratch, cut, or puncture it, and keep it away from heat sources

Step 22 — Install the new battery into the Framework Laptop

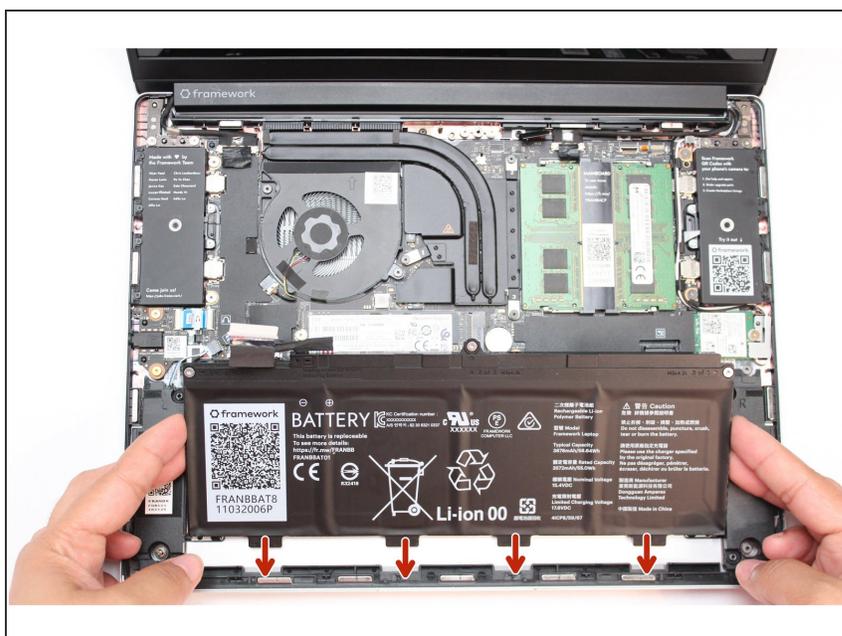

- While handling the Battery with the plastic frame, slide it into the Bottom Cover. Use the first image as a reference.

Step 23 — Double-check that the pins are straight



⚠ Before plugging the Battery connector back in, double check the pins on the Battery receptacle on the Mainboard, and make sure none of them look bent.

⚠ **Don't plug the Battery connector in if pins look bent, as that will bend them even further.** Reach out to Framework Support for guidance.


⚠ If you feel resistance when plugging in the Battery connector, stop, slide the connector back out, and make sure that no pins are being bent.

Step 24 — Re-connect the Battery Connector






- Carefully slide the Battery connector back into the Mainboard, gripping both edges of the connector and sliding in straight without letting the connector twist or bend.

Step 25 — Screw the Battery back in

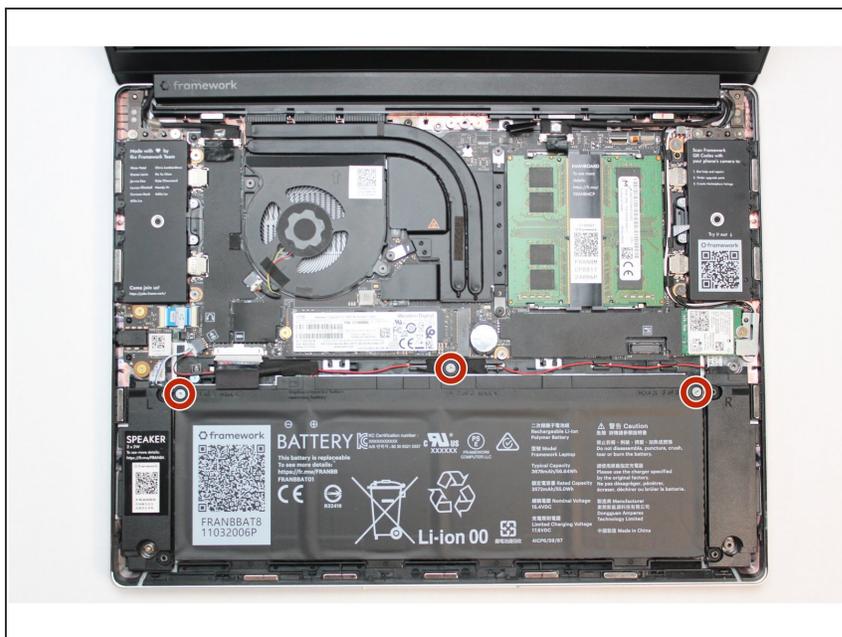

- Using the T5 bit in the Framework Screwdriver, screw the three fasteners into place.
- The battery is now fully connected to the Framework Laptop.

Step 26 — Remove the Bezel

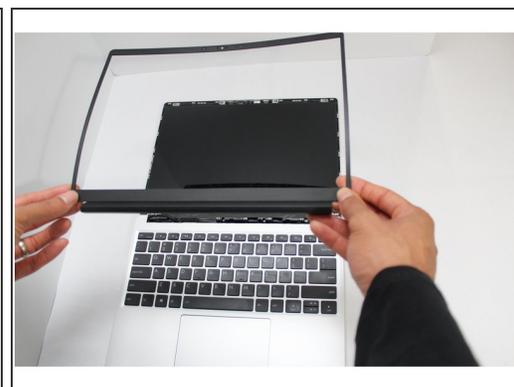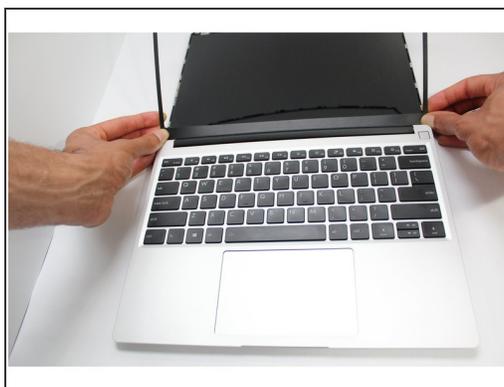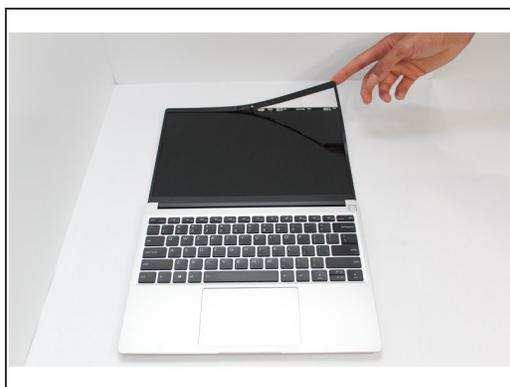

- Open the Framework Laptop 180 degrees to remove the Bezel.
- The Framework Bezel is attached by magnets so you will not require any tools to remove it. Just use your fingernail and pry the Bezel away from the display from one of the top corners of the Framework Laptop.
- Once the Bezel starts peeling off towards the bottom of the Display, lift it up using caution. You might feel a little resistance due to the adhesive at the bottom of the display.


Step 27 — Remove the Display



- Using the T5 bit in the Framework Screwdriver, unscrew the 4 fasteners connecting the Display to the Top Cover.
- The Display is now fully unattached to the Top Cover, you can gently lift it up from the corner using your fingernail.


⚠ Be sure to only handle the Display by the side edges and avoid touching the bottom area.

Step 28 — Separate the Top Cover Assembly

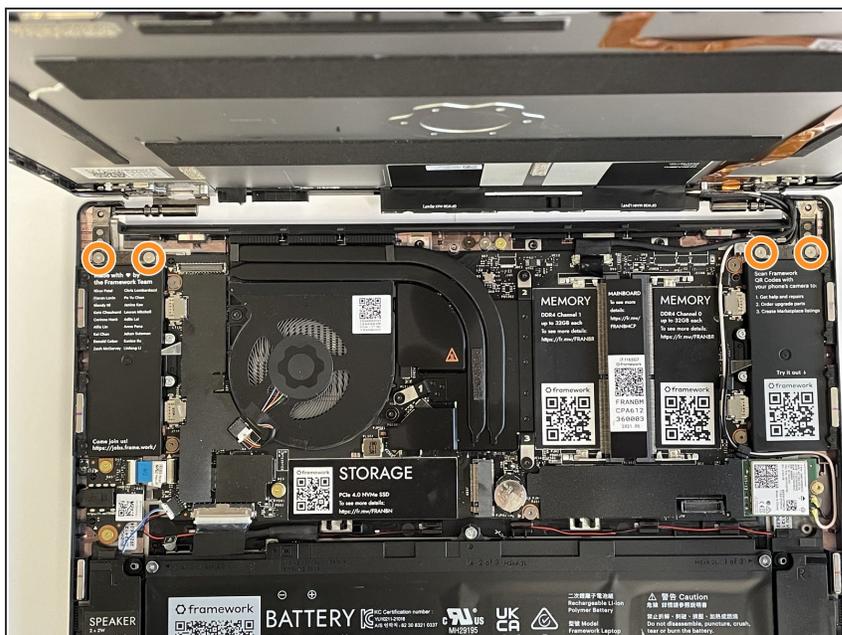


- Rotate the lid back up to a 90 degree angle to make it easier to remove and install the Hinges.
- With the T5 bit in your Framework Screwdriver, unscrew the four fasteners that hold the Hinges into the Bottom Cover.
- ⓘ Note that these fasteners are longer than the ones used to attach the Display and Hinges into the Top Cover. Make sure to keep them separate from those.
- With the Top Cover assembly now unfastened from the Bottom Cover assembly, lift it up and lay it flat, being careful to not pull on the cables too much.

Step 29 — Remove the Hinges

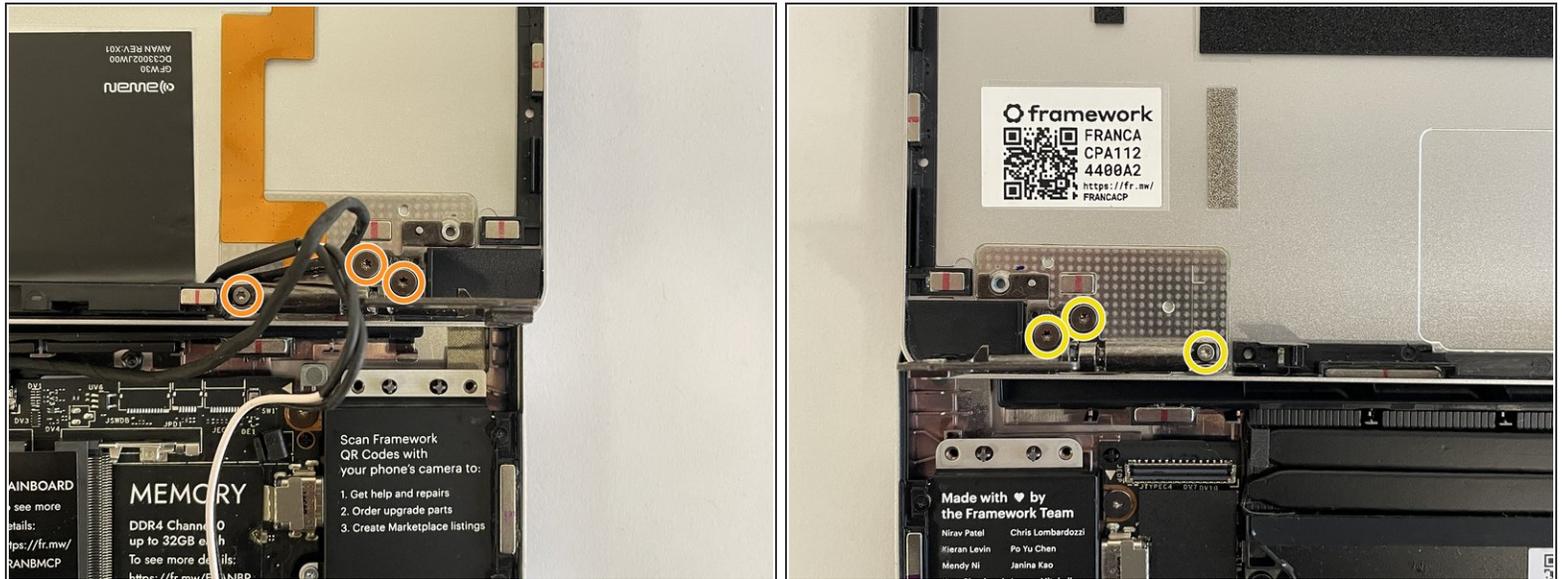


- Move the Antenna and Webcam cables out of the way carefully to make sure you have easy access to the fasteners on the right Hinge.
- Unscrew the three fasteners on the right Hinge using the T5 bit in your Framework Screwdriver, and then remove the Hinge from the Top Cover.
- Repeat this for the three fasteners on the left Hinge and remove the Hinge from the Top Cover.

Step 30 — Install the Hinges

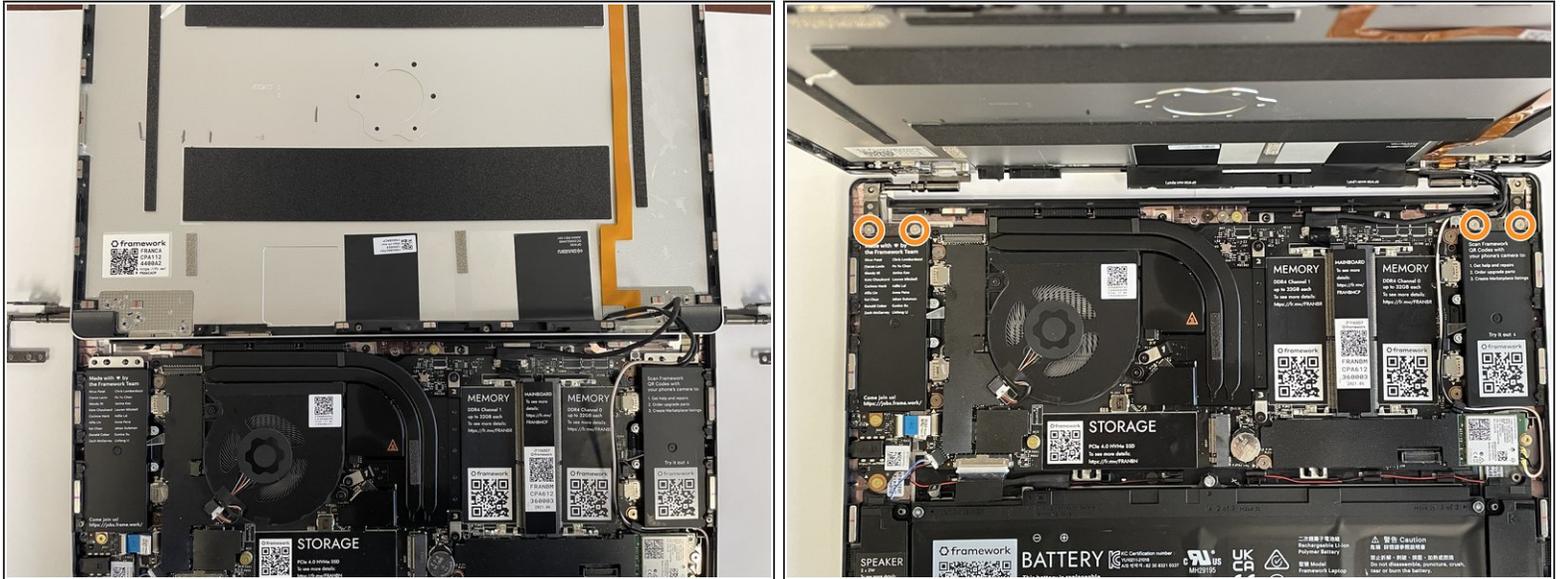



- Pre-rotate the new Hinges to a 90 degree angle to make them easier to install.
- Place the left and right Hinges into the Top Cover and fasten them into place with the three fasteners each that you previously removed.
- Carefully place the Top Cover assembly with the Hinges installed onto the Bottom Cover assembly and fasten the left and right Hinges into the Bottom Cover using two fasteners each that you previously removed.

Step 31 — Re-route the Webcam and Antenna cables

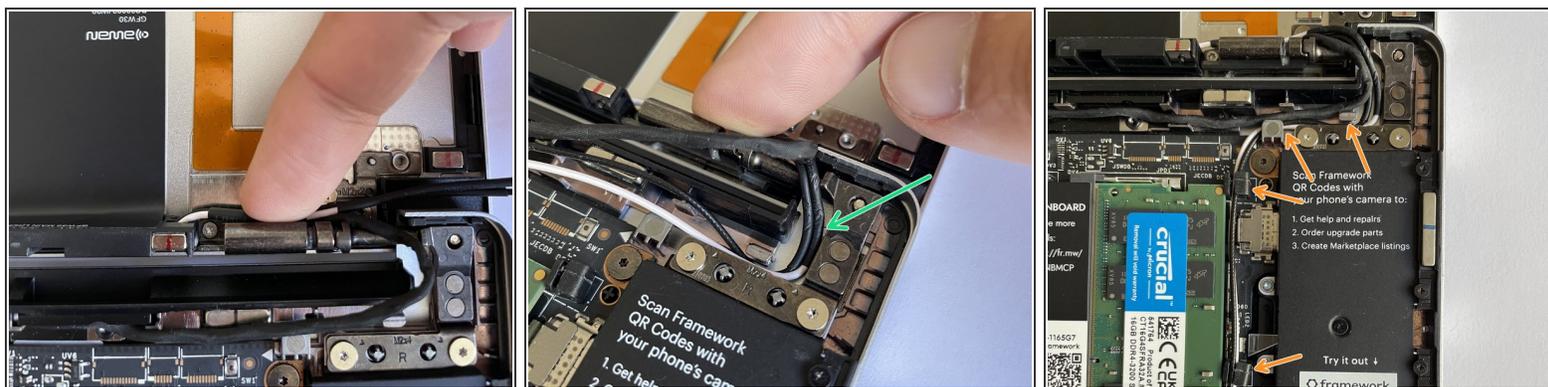

- Stick the antenna cables down onto the new Hinge.
- Route the antenna cables through the hinge area, with the white and black cables sitting flat against the bottom of the Bottom Cover as much as possible. Avoid letting the cables twist or overlap, as this will interfere with the Input Cover and power button. You can use the spudger end of the Framework Screwdriver to help push the cables.
- Route the antenna cables through each of the channels and rubber brackets.


Step 32 — Install the new Display

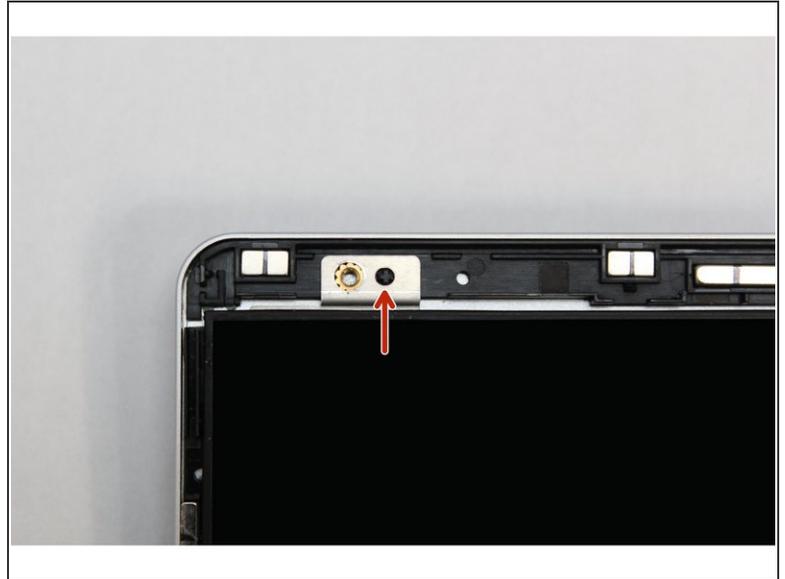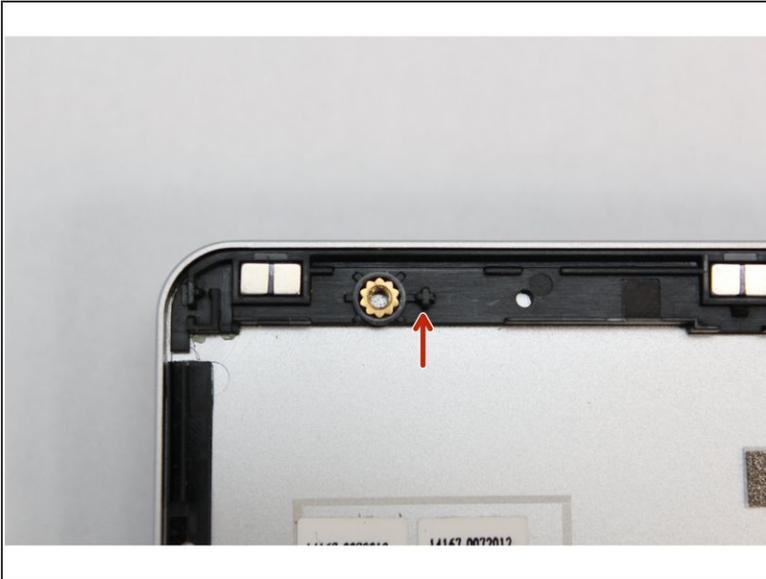

- There are four alignment pins located on the Top Cover. They are located right next to the four fastener slots. Place the silver brackets connected to Display directly over the pins.

⚠ Be sure to only handle the Display by the side edges and avoid touching the bottom area.


Step 33 — Screw the fasteners into the Top Cover

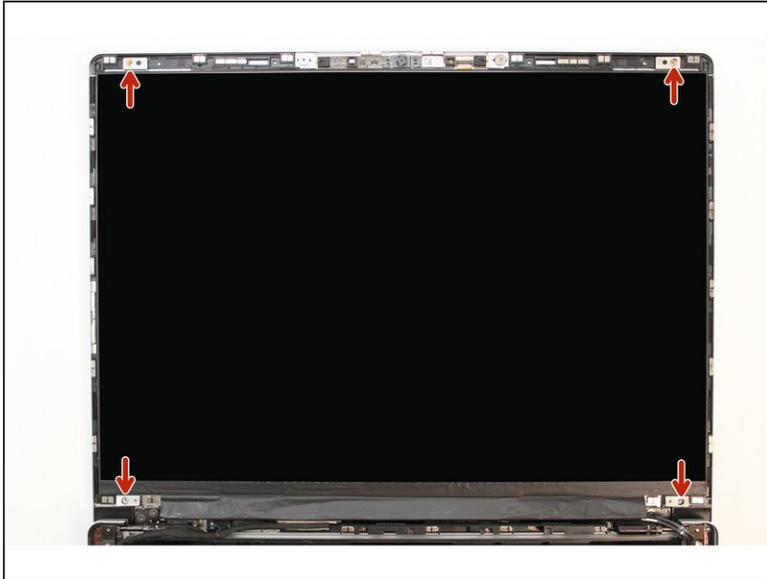

- Using the T5 bit in the Framework Screwdriver screw the four fasteners into place.


⚠ Be sure to not over tighten the fasteners.

Step 34 — Connect the Display Cable to the Mainboard

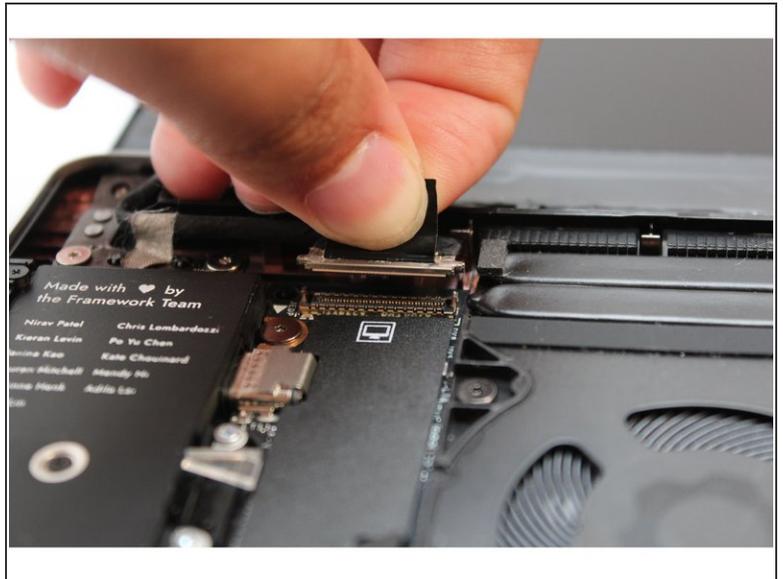

- Route the black Display Cable through the routing channel as indicated in the picture.
- Secure the silver grounding tape as indicated in the first image.
- Using the black pull tab, align the Display Cable connector with the connection on the Mainboard and firmly press down.
- The Display installation is now complete.


Step 35 — Attach the Bezel

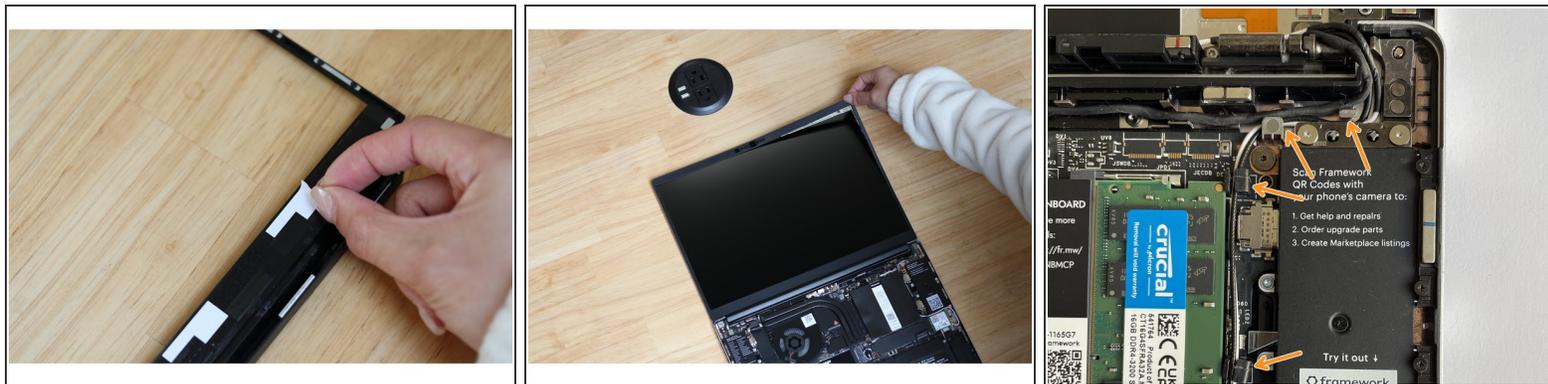

- Open the Framework Laptop 180 degrees to attach the Bezel.
- If installing a new Bezel, remove the liner pieces on the bottom of the Bezel to expose the adhesive.
- Align the corners of the Bezel to the display and place it down. The Bezel is attached by magnets and should easily click into place.
- Make sure that all of the corners and edges of the Bezel are fully connected to the Top Cover. If the corners are not aligned, carefully lift up the part of the bezel and guide it into place.




⚠ Be sure to check that the Antenna and Camera cables are routed flat on and around the right hinge. If they aren't, the Bezel may not sit flush in that area.

Step 36 — Connect the Speaker to the Mainboard

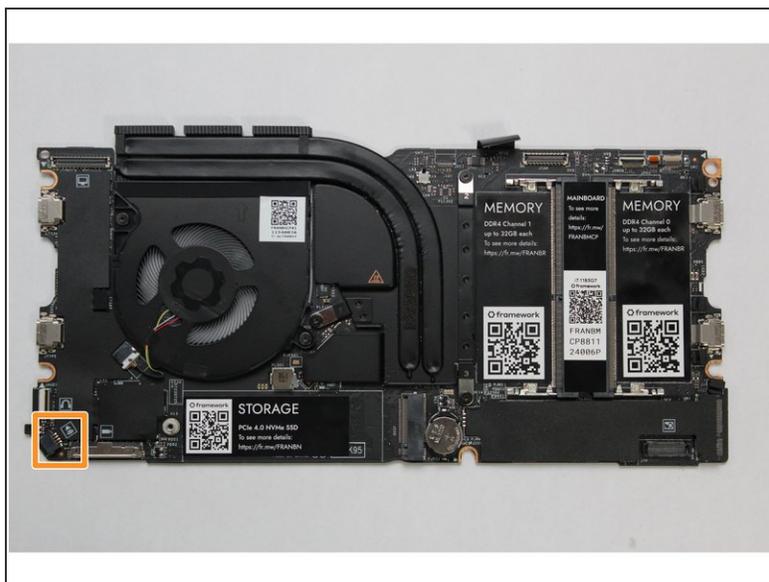


- Using two fingers, slide the Speaker cable into the Mainboard using a straight motion and a slight amount of force.

Step 37 — Connect the Audio Board to the Mainboard

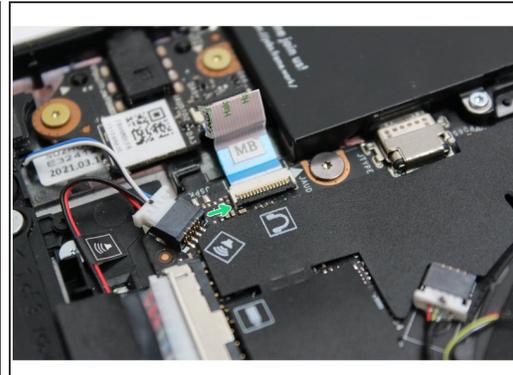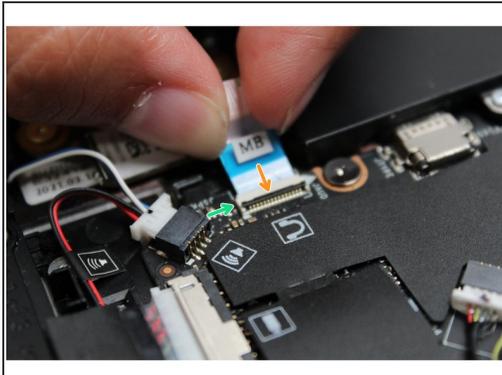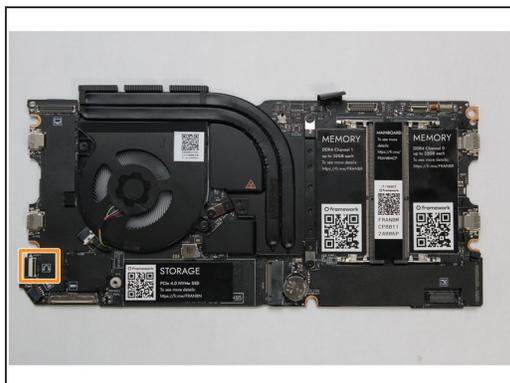




- Connect the Audio Board cable by gently sliding it into the Mainboard. Make sure the black latch on the connector is flipped up so that you can slide the Audio Board Cable into the connector. Slide the cable straight in until the white line is almost at the edge of the connector
- Using your finger or the spudger end of the Framework Screwdriver, flip the black latch down towards the Mainboard to lock the cable in place.
- Once the black latch is secure the Audio Board cable should not come loose.

Step 38 — Connect the Webcam to the Mainboard

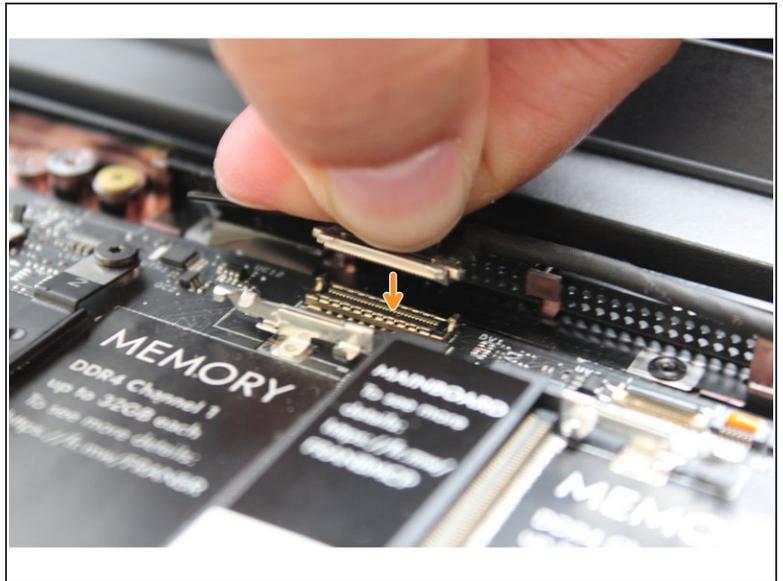

- Hold the pull tab on the Webcam cable and connect it into the Mainboard by aligning the pins from the cable with the socket pins on the Mainboard.

Step 39 — Connect the WiFi Module to the Mainboard

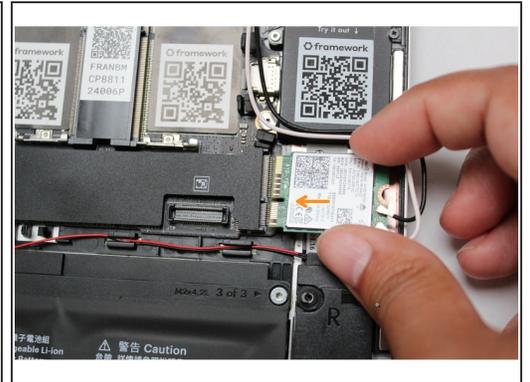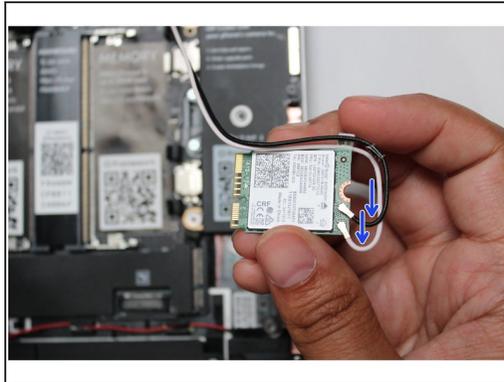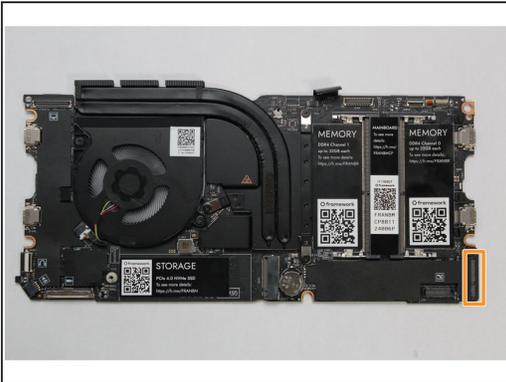

- Make sure that both the black and white WiFi Antenna cables are connected to the module and are rotated downwards as indicated in the second picture with the blue arrows.
- Insert the WiFi module into the Mainboard by aligning the notch on the module with the notch on the socket.

Step 40 — Route the WiFi Antenna cables properly




- Once the module is properly inserted into the Mainboard, carefully route both the black and white WiFi Antenna cables into the black rubber routers as indicated in the first image. Place both the cables behind the metal structure located near the top right of the WiFi module as well.

⚠ Important: The WiFi Antenna cables should not touch the Speaker located below the module as indicated in image one.

- Place the silver bracket over the WiFi module and place the fastener in the hole. Using the T5 bit in the Framework Screwdriver, screw the fastener into place.
- If you are using the new plastic WiFi bracket (shown in the third image) the bracket is attached to the card and contains its own fastener for easier installation.

Step 41 — Insert the Memory module

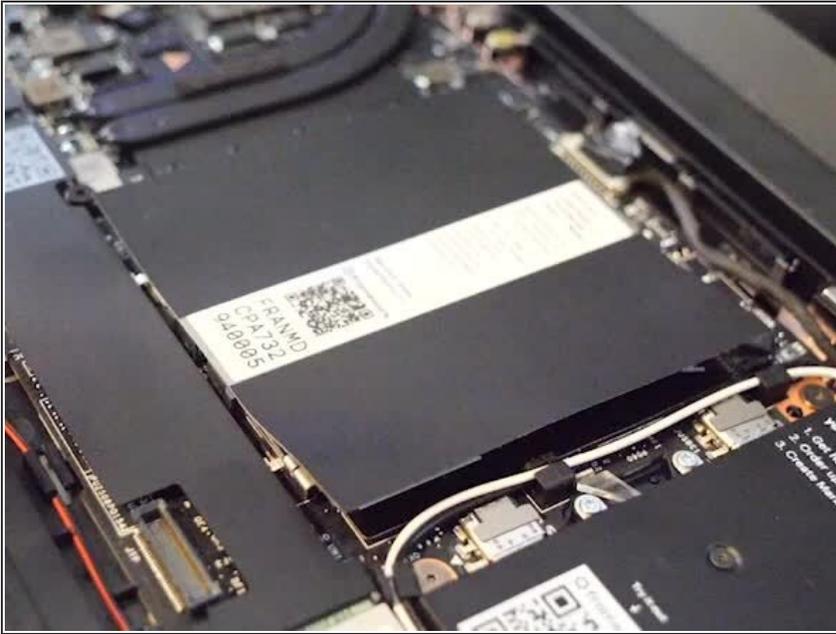


- There are black mylar sheets covering the memory slots. These can be gently bent up to insert your memory modules.
- Insert the Memory module into the Mainboard by aligning the notch on the Memory module with the notch on the socket. Note that for Channel 1 the notch is reversed so the Memory stick may need to be inserted "upside down" with the chips facing down depending on the brand used.

⚠ Make sure that the memory is fully inserted before proceeding.

- Once the module is fully inserted, it will rise up at a 20-degree angle. Gently press it down towards the Mainboard until the clips located at the top and bottom of the receptacle snap into place.
- ⓘ If you are using one Memory module, place it in the socket that is labelled "Channel 0."
- ⓘ The first boot after installing a new Memory module will take longer than normal, as the system prepares itself for the new module.


Step 42 — Install the SSD

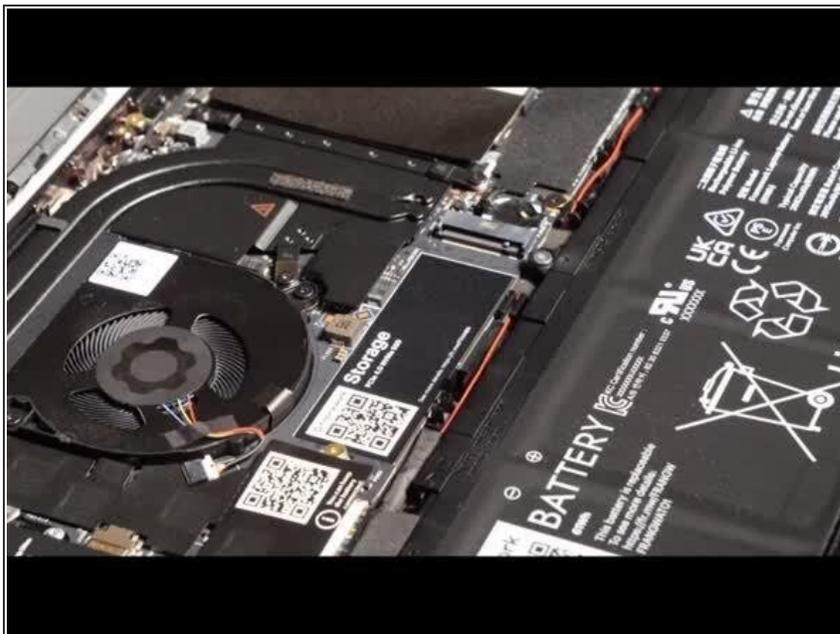

- Using the T5 bit in the Framework Screwdriver, unscrew the fastener that is used to secure the Storage module.
- Align the notch on the Storage module with the notch on the socket and slide the module into the Mainboard.
- Once properly inserted the module will rise up at a 20-degree angle.
- Using one finger gently hold the Storage module down to the Mainboard and use your other hand to screw in the fastener using the T5 bit in the Framework Screwdriver.

⚠ Be sure to not over-tighten the fastener.

Step 43 — Install the new Input Cover

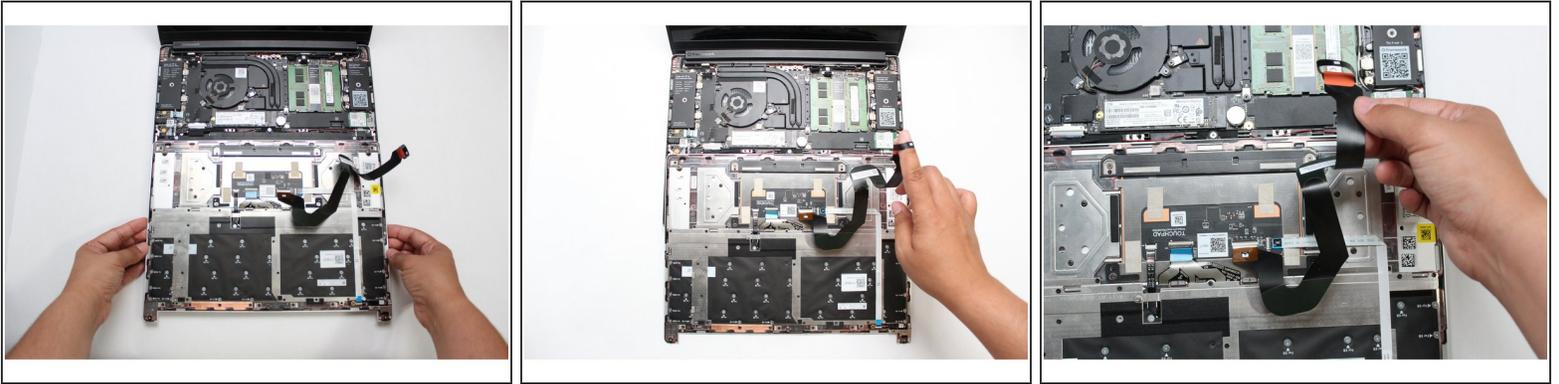


- Gently place the Input Cover keyboard side down on the Bottom Cover as indicated on the image. The cover should be about an inch and a half away from the bottom of the Mainboard so that you can comfortably install the Touchpad Cable.
- ⓘ Note: The orientation of the Input Cover matters. Study the first image in this step to ensure you are properly attaching the cover.
- Locate the loop on the end of the Touchpad Cable and insert your finger into it.

Step 44 — Connect the Touchpad Cable



- Using slight force, connect the Touchpad Cable by aligning it to the socket on Mainboard. You should hear it click into place once properly connected.

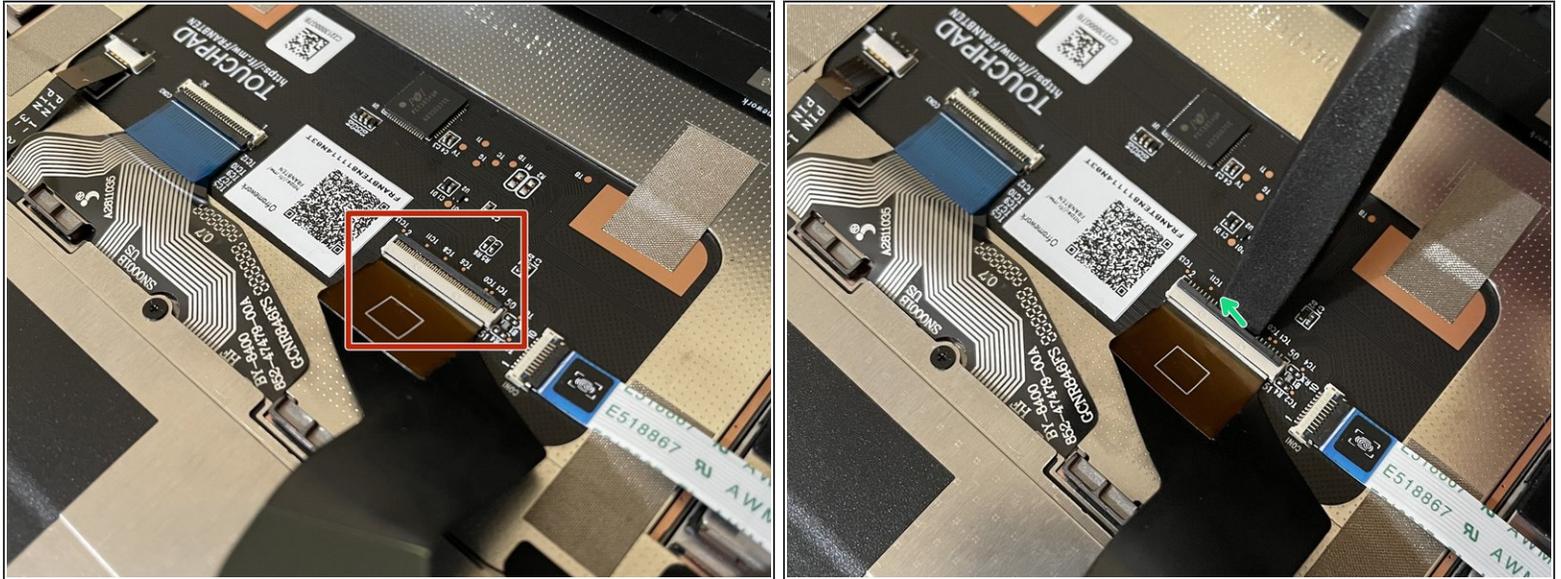Step 45 — Make sure the Touchpad side of the Touchpad Cable is fully inserted

⚠ Before closing up the laptop, make sure that the Touchpad end of the Touchpad Cable is fully seated in the receptacle.

- The cable should be inserted far enough that the white line almost touches the receptacle.
- If it is not inserted far enough, you'll need to flip up the black latch on the other side of the connector, slide the cable in further, and then close the black latch again.

Step 46 — Flip the Input Cover back into place



- Once the Touchpad cable is secured to the Mainboard, flip the Input Cover over the Bottom Cover so that the keyboard is facing up and attach it to the Bottom Cover by aligning the top and bottom edges of both covers.
- Tip: The covers are magnetic and should fit into one another easily. If you feel any resistance simply lift the Input Cover up and try again.

Step 47 — Screw the fasteners back into place



- Close the Framework Laptop and place it upside down to reveal the fasteners on the Bottom Cover.
- Using the T5 bit in the Framework Screwdriver, screw all 5 fasteners back into the Bottom Cover.

⚠ Be sure to not over-tighten the fasteners.

Step 48 — Start using the Framework Laptop!



- Insert the Expansion Cards of your choice. With keyboard face up, this configuration supports USB4/DP for the upper left and right slots, USB 3.2 only for the lower left slot and USB 3.2/DP for the lower right slot. All ports can be used for charging via USB. A diagram of Expansion Card compatibility can be found [here](#).
- ⓘ Note that certain Expansion Cards when placed in the back two slots will currently result in higher power consumption. Check the [KB article](#) for more detail on this.
- Plug the USB-C power cable into the USB-C Expansion Card.
- Turn the Framework Laptop over, open it, and press the power button. If you're using Windows, you may need to [re-activate Windows](#) after you replace the Mainboard.
- ⓘ The first boot will take longer than normal as the system does memory training. The more memory you've installed, the longer this could take (on the order of a minute or two with 64GB!)

Step 49 — Installing the Framework Driver Bundle and BIOS



- If you're using Windows and you've upgraded to an AMD Ryzen 7040 Series Mainboard, you'll also need to install the latest [Framework Laptop Driver Bundle](#). We also recommend installing the latest BIOS version for your Mainboard.